

Tabella per la conversione codici valvole Usa, europa, cina e russia

USA	EUROPA	CINA	RUSSIA	WORLD MILITARY
2A3	2A3	2A3	2S4S	
6BG4			6C4C	
12AT7	ECC81	-	-	M8162, 6201, ECC801S, E81CC, 7728, B309, B739, A2900
12AU7	ECC82	-	-	M8136, 7316, ECC802S, E82CC, 7730, B329, B749
12AX7	ECC83	-	-	M8137, 7025, ECC803S, E83CC, 7729, B339, B759
6DJ8	ECC88	6N1	6N1P	E88CC
6922	E88CC		6N23P-EV	CCa ,6N23P-EV
7308	E188CC	-	-	
8223	E288CC	-	-	
6SN7	6SN7	6N8P	6N8S	B65
6SL7	6SL7	6N9P	6N9S	5691, VT229
6SJ7	6SJ7	6J8P	6J8	6SJ7GT , 5693
6SH7	CV594		6J3	6SH7GT
6267	EF86		6J32P	Z729, ECC806S
6CM4	EC86		6S3P	6S3P-EV
5687	5687	6N12P	-	5687WA
6AX7	ECC41	6N2	6N2P	6N2P-EV
6AS7G			6N13S	6080WA
6BM8	ECL82	-	6F3P	
6GW8	ECL86	-	-	
396A, 2C51, 5670		6N3	6N3P	6N3P-DR , 6N3P-I
12AX7	ECC83	6N4		ECC803, 5751, E83CC, B339
6AJ8	ECH81		6I1P	6I1P-EV
6BQ5	EL84	6P14	6P14P	N709, E84L, 7320, 7189, 6P14P-EB
6CA7	EL34	-	-	KT77, E34L
6L6	6L6	6P3P	6P3S	KT66, EL37, 6P3S-E, VT75
6V6	6V6	6P6P	6P6S	KT63, 5992
6550	-	6P27P	6P27P	KT88
6AC7		6J4P		6AC7W
		6Z4	6C4P	6C4P-EV
5AR4	GZ34	-	-	U77, 52KU
5U4G	5U4G	5Z3P	5C3S	U52, WE274A/B, 53KU
5V4G	GZ32	-	-	U51, 54KU
5Y3	-	5Z2P	5Z2S	U50
5Z4	GZ30	5Z4P	5Z4S	
6X4	EZ90	-	6C4P-EV	U707, U78
6X5	EZ35	-	-	U70, U147
6CA4	EZ81	-	-	U709
6V4	EZ80	-	-	
807			6P7S	VT-100A